

www.votatec.ca

INSTALLATION INSTRUCTION MANUAL

1. Introduction

This LED Area light uses the latest in solid state lighting technology for long life, low maintenance, and high efficiency.

There are Multiple installation methods, suitable for various occasion.

Warning:

To avoid the risk of fire, explosion, or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

To avoid electric shock:

Be certain electrical power is OFF before and during installation and maintenance.

To avoid explosion:

 \square Make sure the supply voltage is the same as the rated luminaire voltage.

☑Do not install where the marked operating temperatures exceed the ignition temperature of the hazardous atmosphere.

Do not operate in ambient temperatures above those indicated on the luminaire nameplate.

Keep lens tightly closed when in operation.


For supply connections use wire rated for at least 90°C

After installation, please

☑ Check whether the lighting fixture is firmly fixed.

☐ Check whether wires are connected correctly.

At last, turn on the power, and check if the lighting fixture works well. If not, please turn off the power and contact with local dealer.

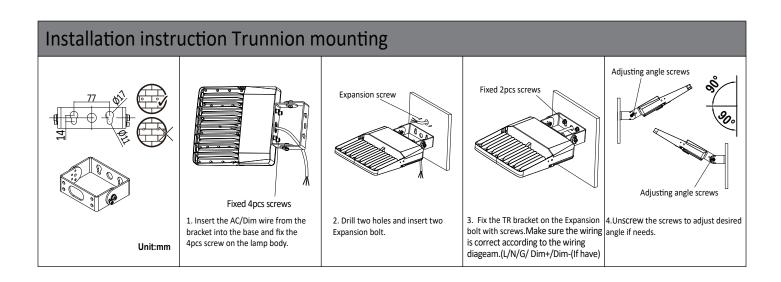






www.votatec.ca


Slim Area light, 120-347V Wattage and CCT Adjustable

Installation instruction Unversial bracket on square/round pole

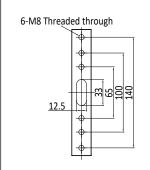

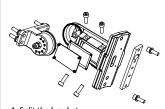

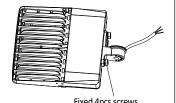

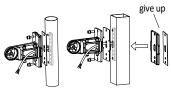


1. Split the bracket.

2. Insert the AC/Dim wire from the bracket into the base and fix the 4pcs screw on the lamp body.


3. Fix iron and Rubber Silicones in the lamppost and lock the screws to half.




Unit:mm

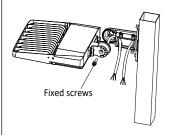

4. Insert the AC/Dim wire into the other part of the bracket, tighten the large screw.

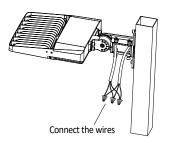


5. Make sure the wiring is correct according to the wiring diageam. (L/N/G/ Dim+/Dim-(If have)

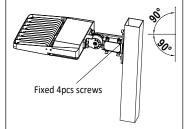


6.Put the wire into the support chamber and lock the cover.Adjust to the required angle through large screws.


Installation instruction Unversial bracket on tennon bracket

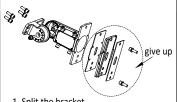


1. Split the bracket.

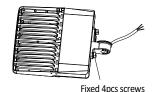


2. Insert the AC/Dim wire from the bracket into the base and fix the 4pcs screw on the lamp body.

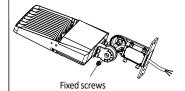


3. Insert the AC/Dim wire into the other part of the bracket, tighten the large screw.

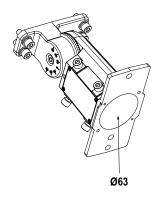


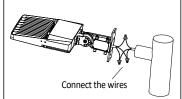


4a. Make sure the wiring is correct according to the wiring diageam. (L/N/G/ Dim+/Dim-(If have)

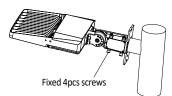


5a. Install the lamp post and tighten the 4pcs M8 screw.

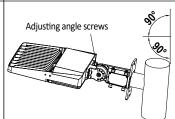


6a. Unscrew the screws to adjust desired angle if needs

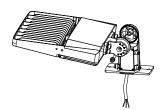

4b. Insert the AC/Dim wire into the other part of the bracket, tighten the large screw.

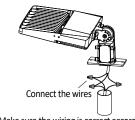

5b. Make sure the wiring is correct according to the wiring diageam.
(L/N/G/ Dim+/Dim-(If have)

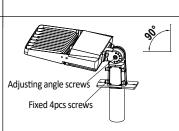

6b. Install the lamp post and tighten the 4pcs M8 screw. Unscrew the screws to adjust desired angle if needs.

Unit:mm



www.votatec.ca

Slim Area light, 120-347V Wattage and CCT Adjustable

Installation instruction Slip-fitter bracket Fixed 4pcs screws 1. Split the bracket. 2. Insert the AC/Dim Wire from the bracket 3. Insert the AC/Dim Wire into the other part \cdot into the base and fix the 4pcs screw on the of the bracket, and tighten the large screw. lamp body. Fixed 4pcs screws Connect the wires Adjusting angle screws 4. Make sure the wiring is correct according to 5. Install the lamp post and tighten the 6. Adjust to the required angle through large the wiring diageam. 4pcs M8 screw.

