

www.votatec.ca CR-7106

INSTALLATION INSTRUCTIONS

Package Contents

Part	Description	Quantity
1	Emergency Lighting	1
2	Hardware Kit	1




Warnings and Cautions

IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- 1. Review the diagrams thoroughly before beginning.
- 2. All electrical connections must be in accordance with local codes, ordinances, and the National Electric code.
- 3. Disconnect power at fuse or circuit breaker before installing or servicing.
- 4. Do not use outdoors.
- 5. Do not mount in hazardous locations, or near gas or electric heaters.
- 6. Do not let power cords touch hot surfaces.
- 7. Equipment should be mounted in locations and at heights where it will not be subjected to tampering by unauthorized personnel.
- 8. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- 9. Do not use this equipment for other than intended use.
- 10. All servicing should be performed by qualified personnel only.
- 11. Allow battery to charge for 24 hours before first use.


SAVE THESE INSTRUCTIONS

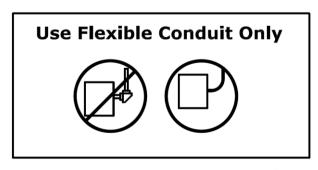


NOTE: First turn off electricity.

Wall mounting


1. Remove the face plate from fixture with a screwdriver.

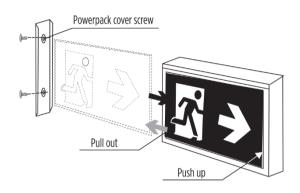


- 2. Push the AC supply wires through the knock-out whole on the back of fixture.
- 3. Securely attach mounting plate to J-box (not provided).

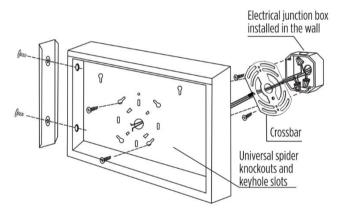

4.ELECTRICAL CONNECTIONS

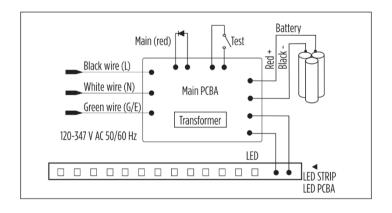


5. Connect the battery to connector on the PCBA.

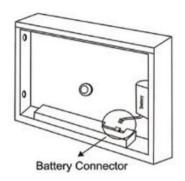

- 6. Snap fixture onto mounting plate and ensure no wires are pinched. Make sure unit is fully attached.
- 7. Restore power and press test button. Battery powered LED will come on, AC light will turn off.

Ceiling or End Mounting

- 1. Open top cover and knockout on the top of fixture.
- 2. Secure the mounting plate to tube with nut.
- 3. Push the AC supply wires through the knock-out whole on the top or side.

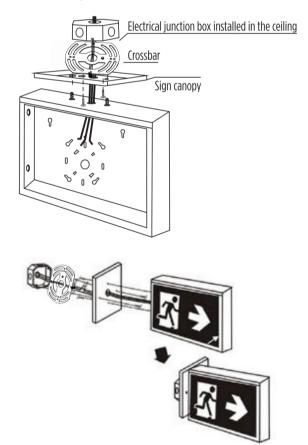

4. Reference step 4-7 in wall mounting above for ceiling or end mounting.