



WARNING

RISK OF ELECTRIC SHOCK


IMPORTANT:

READ BEFORE REMOVING FIXTURE FROM CARTON. RETAIN FOR FUTURE REFERENCE.

- Disconnect electrical power to fixture and follow proper lockout/tag out procedures before installation or maintenance. Contact a qualified electrician for installation.
- DO NOT disassemble the fixture.
- Use ONLY in 120VAC, 60Hz circuits.
- DO NOT use with extension cord near water or wherever water may accumulate.


Wiring Instruction

1. Remove the product and check the appearance for good condition. (Pic 1)

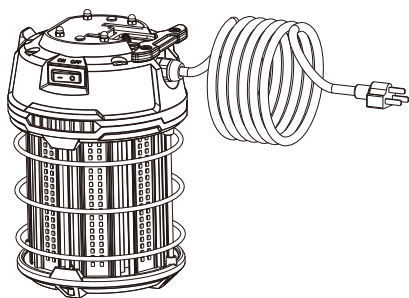


Pic 1

2. Rotate to open metal hooks. (Pic 2)

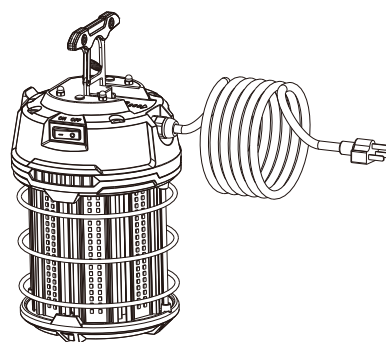


Pic 2

3. Rotate the buckle according to the hook and hang on the ring or rope. (Pic 3)

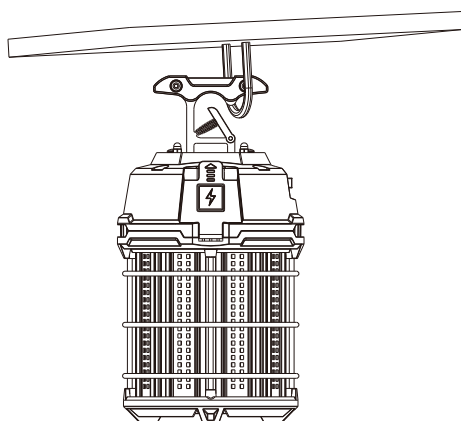

Pic 3

4. Product installation completed. (Pic 4)

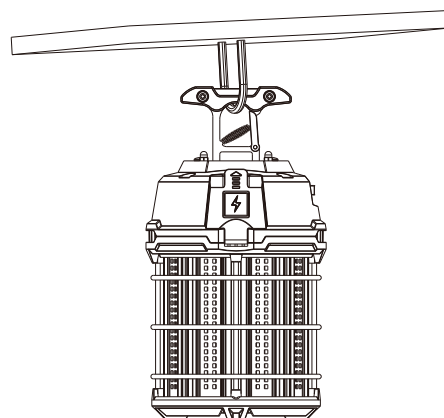

Pic 4

MODEL	Wattage	UL Current @ 120V	LM	CCT	Link-able Qty
W3-10-50	100W	1.0	13000LM	5000K	12pcs