

USE FLEXIBLE CONDUIT ONLY



WARNING

SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY READ AND FOLLOW ALL SAFETY INSTRUCTIONS


- Review the instructions thoroughly before beginning.
- All electrical connections must be in accordance with local codes, and the National Electric code.
- Disconnect power at the fuse or circuit breaker before installing or servicing.
- For indoor use ONLY.
- Do not mount in hazardous locations, such as near gas or electric heaters.
- Do not let power cords touch hot surfaces.
- Equipment should be mounted at heights that it will not be tampered by unauthorized personnel.
- Do not use this equipment for other than intended use.
- All servicing should be performed by qualified personnel only.

MOUNTING INSTRUCTIONS

THE FIXTURE IS SUITABLE FOR WALL, SIDE AND CEILING MOUNTING

1. Open the front cover with blade screwdriver. (See Fig #3)
2. Knockout appropriate mount screw hole and cable hole, mount the back plate on the wall after feeding the building AC Supply Cable into back plate. (See Fig #4)
3. For ceiling and side mounting purpose, remove the mounting hole cover on the top or side of the unit. (See Fig #4, #5, #6) Assemble the canopy on the unit. (See Fig #2)
4. Attach the crossbar to the J-Box, set the longer blade of crossbar touching the J-Box.
5. Route the proper wires through mounting hole out of housing.
6. Make electrical connections inside the J-Box as per wiring diagram. (See Fig #1)
7. Push excess wire into J-Box, use screws to tighten the canopy to crossbar so the canopy is securely fastened and tight against the wall.
8. Attach battery connector to PC Board, restore front cover on unit.
9. For double face installation(only for ceiling and end mounting),remove the back plate and replace with the extra front plate provided. (See Fig #8)
- 10.If pictogram direction assembled is not suitable,change the pictogram direction or replace pictogram accordingly. (See Fig#7)


WIRING DIAGRAM-Fig.1

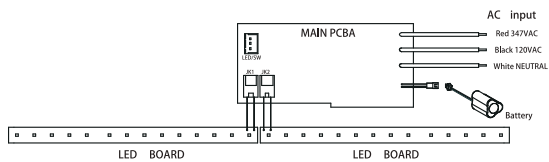

AC WIRING


If using 120V,connect the black wire to the hot lead. If using 347V,connect the red wire to the hot lead. Cap unused leads.

CANOPY ASSEMBLY-Fig.2

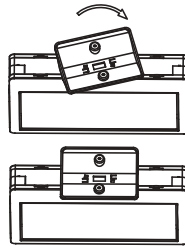


Insert canopy into housing at 20 degree angle and twist. Quick snap is now firmly locked.
CAUTION
Trying to remove canopy locked in place may cause damage.

OPEN FRONT COVER-Fig.3

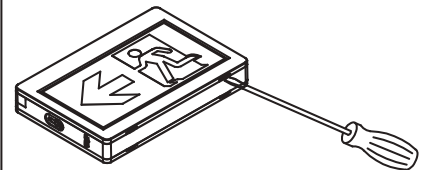


Open front cover with blade screwdriver


WALL MOUNTING-Fig.4

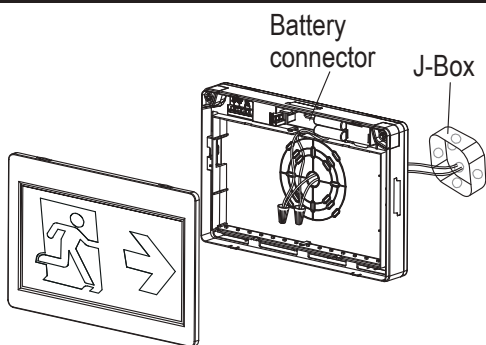


SIDE MOUNTING-Fig.5

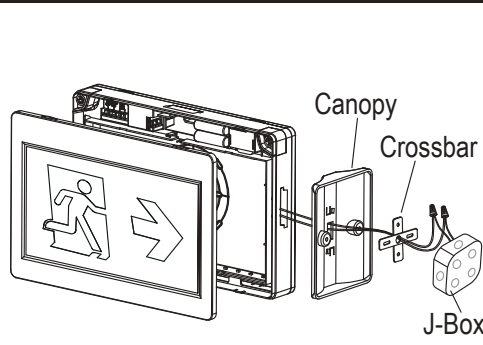

CEILING MOUNTING-Fig.6

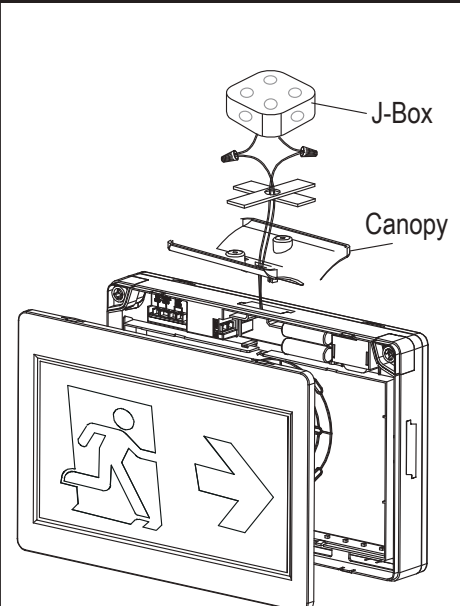

CHANGE DIRECTION OF PICTOGRAM - Fig.7

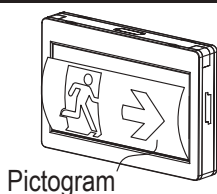

DOUBLE FACE INSTALLATION - Fig.8

